



LOC-Code

Datum: 12.06.2014

Abt./Ort: PSM / HZB

Verfasser: S. Otte

The following hot air tools are equipped with a LOC-function (lockable override control): HG 2320 E, HG 2520 E, HG 2620 E

LOC function

Description:

With the activation of the LOC function, the current settings of temperature and air flow are protected against an adjustment. A wrong adjustment during the application (f.e. just by accident) is not possible any more.

If a user is pressing the buttons or joystick, the hot air tool won't react. During the activated LOC function a lock sign is visible in the display. The LOC function can be deactivated again at any time.

How to do:

1. The hot air tool is switched off. Press the joystick to the left. Hold it to the left during you switch on the hot air tool. "LOC" appears in the display now.

Within 10 seconds this key combination must be entered:

- a. 2 x joystick to the right
 - b. 1 x joystick to the left
 - c. 2 x joystick to the right
 - d. LOC is active, the lock sign appears in the display
2. If a wrong key combination has been entered or the 10 seconds are run out the hot air tool switches to normal operation.
 3. With the same key combination the LOC function can be deactivated again.

A personal key combination is not possible. Please be careful with this information!